

600 SERIES SWITCH PANEL INSTALLATION INSTRUCTIONS

ETSP6F

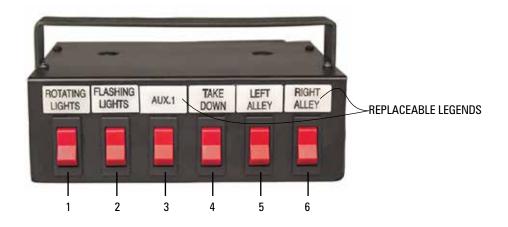

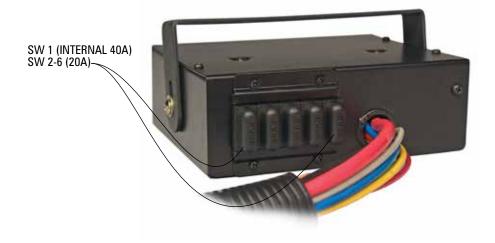

OPERATION:

Switches are sequential from left to right on front panel. Note that switch 1 is 40A (internal) and switches 2-6 are 20A fused.

SAFETY NOTICE:

The outputs of the switch panel are protected with a 40 Amp thermal breaker on main input and individual fuses on the outputs. Make sure to only replace with same type and rating of fuse.

Make sure to properly fuse the supply wire at the source of power in the event of a short circuit. Also make sure the wire gauge is sufficient to carry a minimum of 50 Amps of current.

FUNCTION	WIRE COLOR	LABEL	GAUGE
Switch 1	Red		12
Switch 2	Blue		14
Switch 3	Gray		14
Switch 4	Yellow		14
Switch 5	Orange		14
Switch 6	Green		14
Main Power	Red	"H"	8
Ground	Black	"G"	18
Backlight	Red	"B"	18

INSTALLATION:

Immediately after unpacking, examine the switch panel for any damage that may have occurred during transit. If the equipment has been damaged during transit, promptly file a claim with the carrier. Carefully check all envelopes, shipping labels, and tags before removing or destroying them.

MOUNTING YOUR SWITCH PANEL:

This switching system comes with a Universal Bail Bracket that allows for versatile mounting in position needed. Positioning the bracket below the unit permits it to be mounted on a horizontal surface. Positioning the bracket above the unit permits it to be mounted to the underside of the dash.

Determine where you will locate the unit then use the mounting bracket as a guide and drill holes into the mounting surface using the appropriate size drill bit.

The bracket can then be mounted to the surface. The type of hardware will vary depending on what surface the switch panel is being mounted to.

SAFETY NOTICE:

When drilling into the vehicle, ensure that both sides of the surface are clear of anything that could be damaged.

DIMENSIONS			
Overall	6.2"L x 5.2"W x		
Dimensions:	2.2″D		

Important Information: —

• DO NOT install this product or route any wires in the Air Bag Deployment Zone. Refer to your vehicle Owner's Manual for the location of any air bag deployment zones.



To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product please visit our website at www.soundoffsignal.com and select the "Warranty & Returns" link along the left column of our home page. If you have questions regarding this product please contact Technical Services, Monday - Friday, 8 am to 5 pm at 1.800.338.7337, press #4 to skip the automated message. Questions or comments that do not require immediate attention may be emailed to techsupport@soundoffsignal.com.